


PAR31MAA Select Controller Sensor Position

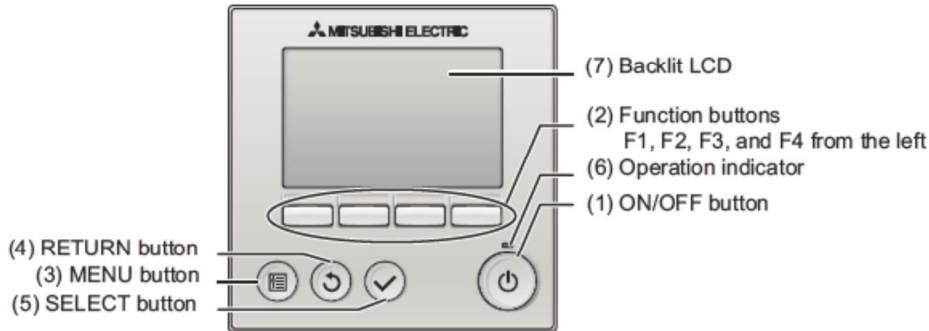


1. Turn controller off using Button




2. Select Menu using Button



3. Select Service menu using down cursor key (F1)

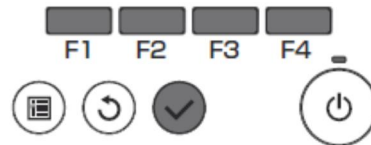

4. Enter maintenance password default 9999 using (F1,F2,F3,F4 keys)

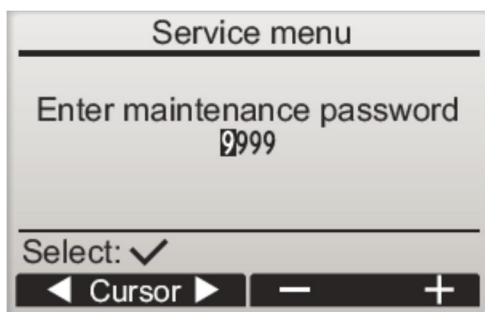

WELLINGTON HEAD OFFICE

1 Parliament Street, Lower Hutt
PO Box 30772, Lower Hutt 5040
Phone (04) 560 9147 · Fax (04) 560 9133

AUCKLAND LOCAL OFFICE


Unit 1, 4 Walls Road, Penrose, Auckland
PO Box 12726, Penrose, Auckland 1642
Phone (09) 526 9347 · Fax (09) 526 9369

CHRISTCHURCH LOCAL OFFICE


44 Halwyn Drive, Hornby, Christchurch
PO Box 16904, Hornby, Christchurch 8441
Phone (03) 341 2837 · Fax (03) 341 2838



5. Press key to acknowledge.
6. Select Function Setting (F1 and F2)
7. Select "0" for Refrigerant Address (F1 and F2) (Different if Group Controlled)
8. Select "Group" for Unit Number using F1 to F4 keys (F3 and F4)

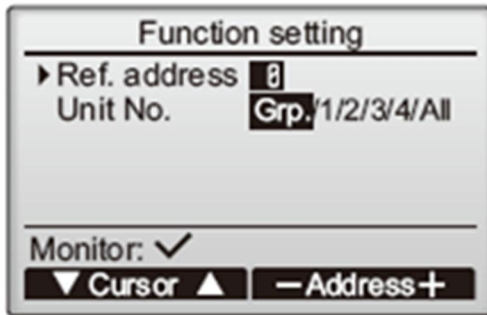

9. Press key and controller will collect data.
10. Select **Mode 2** with up/down keys (F1 and F2)
11. Select **Option 3** with side to side cursor keys (F3 and F4)

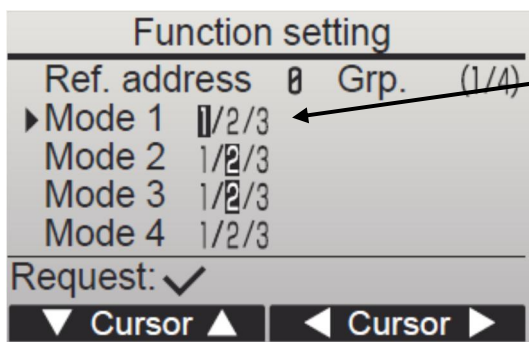

Mode 2 Option 3 selects controller sensor




12. Press Select Button and controller will send settings to the indoor unit.




13. Exit Function Setting mode with key.



14. Return to normal controller mode with key.

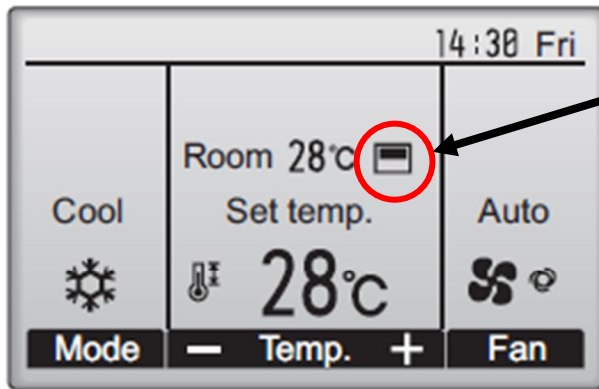

This symbol indicates that the unit is sensing room temperature from the wall controller.

This symbol will change to a  symbol if sensing from the unit sensor.