 
 




HOW TO CHANGE ROOM AIR SENSING FROM INDOOR UNIT TO PAR-21MAA

1. Turn controller off.
2. Press **FILTER** and **TEST** buttons simultaneously and hold until **FUNCTION SELECTION** appears on screen. Hour lines on clock flash.



3. Press **clock UP** button. Select outdoor unit address. For example "00" when controlling one unit.




4. Press **timer ON/OFF** button to move cursor. Minute lines on clock flash.



5. Press **clock UP** button to select indoor unit address. For example "00" when controlling one unit.

6. Press **MODE (BACK)** button. Two lines above temp will flash.

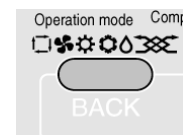

7. Press **TEMP UP** button to select **02**.

8. Press **MENU** button. 3rd line will flash. Press **TEMP UP** button until **3** appears.



9. Press **MODE (BACK)** button to confirm setting. "023" will flash then stop.

Press and hold **FILTER** and **TEST** button simultaneously to exit.

NB

1. This procedure is applicable to the **P Series** units only
2. This function is **not** available on the M Series high walls
3. On the Floor models, turn **SW501-5** on the interface to **ON**