




Lossnay Interlocking Instructions

This applies on LGH and VL models.

1. Turn the controller off. 
2. Select the *Menu* button 
3. Select *service* using the down cursor key (F1)

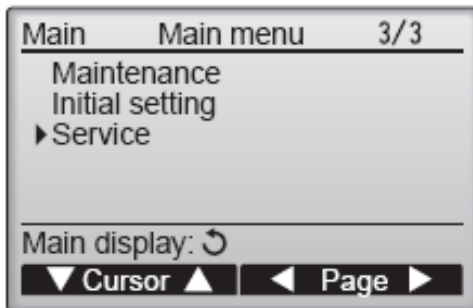


4. Enter Maintenance password default 9999 using (F1, F2, F3, F4 keys)


5. Press  to acknowledge

6. Select *Function setting* using (F1 and F2) Keys

7. Press  to acknowledge

8. Select *Ref. address* of the unit to be changed (F1 and F2)
Select *Grp* for the refrigerant group using (F3 and F4)

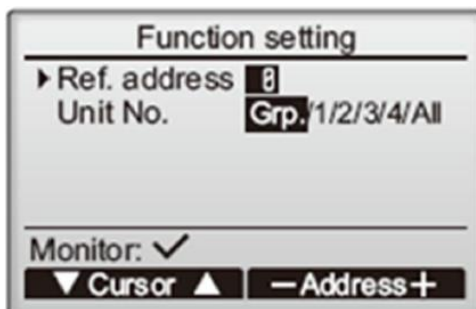

9. Press  key and the controller will collect data.

WELLINGTON HEAD OFFICE

1 Parliament Street, Lower Hutt
PO Box 30772, Lower Hutt 5040
Phone (04) 560 9147 · Fax (04) 560 9133


AUCKLAND LOCAL OFFICE

Unit 1, 4 Walls Road, Penrose, Auckland
PO Box 12726, Penrose, Auckland 1642
Phone (09) 526 9347 · Fax (09) 526 9369




CHRISTCHURCH LOCAL OFFICE

44 Halwyn Drive, Hornby, Christchurch
PO Box 16904, Hornby, Christchurch 8441
Phone (03) 341 2837 · Fax (03) 341 2838

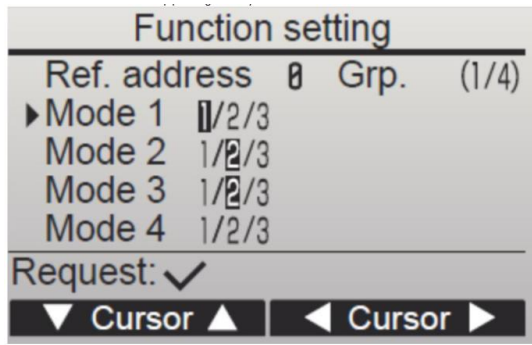10. Select *MODE 3* with the up/down buttons then option 2 or 3 as per the matrix below.



03	LOSSNAY connection	Not connected	1
		Connected (without outdoor air intake by the indoor units)	2
		Connected (with outdoor air intake by the indoor units)	3

11. Press  key to acknowledge. The controller will send data to the indoor unit
12. Press the  key twice controller will then display “*exit function setting please wait*”
13. To return to the home screen keep pressing  key.