





Removing 4 Degree Offset


This applies to P and S series units

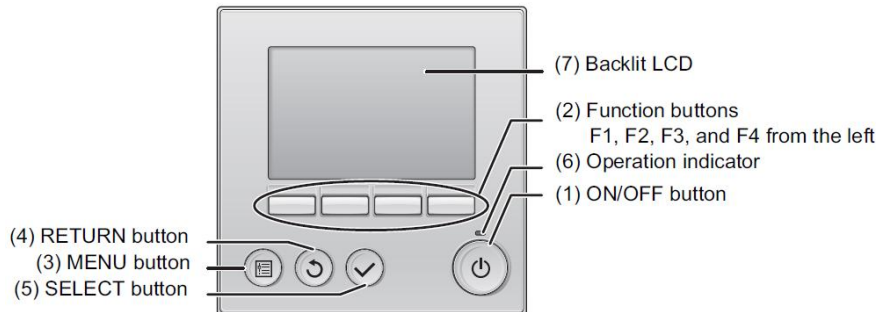



1. Turn the controller OFF. 
2. Select the *Menu* button 
3. Select *Service* using the down cursor key (F1)

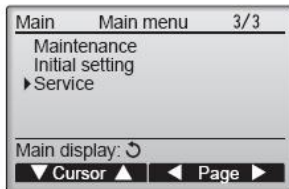

4. Enter Maintenance password default 9999 using (F1, F2, F3, F4 keys)

5. Press  to acknowledge
6. Select *Function setting* using (F1 and F2) Keys

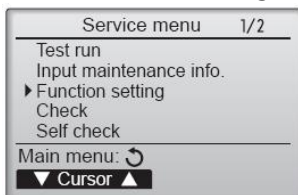

7. Press  to acknowledge
8. Select *Ref. address* of the unit to be changed (F1 and F2)
 Select *All* for the refrigerant group using (F3 and F4)

WELLINGTON HEAD OFFICE


1 Parliament Street, Lower Hutt
 PO Box 30772, Lower Hutt 5040
 Phone (04) 560 9147 · Fax (04) 560 9133





AUCKLAND LOCAL OFFICE

Unit 1, 4 Walls Road, Penrose, Auckland
 PO Box 12726, Penrose, Auckland 1642
 Phone (09) 526 9347 · Fax (09) 526 9369

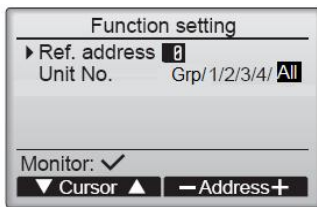CHRISTCHURCH LOCAL OFFICE

44 Halwyn Drive, Hornby, Christchurch
 PO Box 16904, Hornby, Christchurch 8441
 Phone (03) 341 2837 · Fax (03) 341 2838



9. Press  key and the controller will collect data
10. Select Mode 24 using (F1 and F2) keys
11. To *remove* 4-degree offset select option 2 (F3 and F4) keys
12. To *reinstate* 4-degree offset select option 1
13. Press  key to acknowledge. The controller will send data to the indoor unit
14. Press the  key twice controller will then display "*exit function setting please wait*"
15. To return to the home screen keep pressing  key.