






PAR 31(2) Sensing Location


This applies to P and S series units.

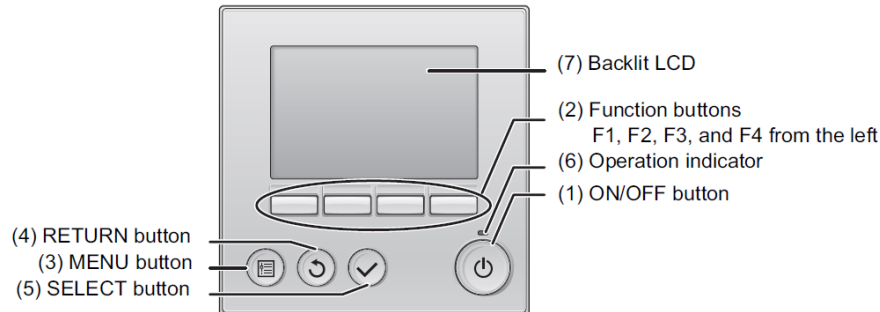

1. Turn the controller OFF. 
2. Select *Menu* using button. 
3. Select *Service* using the down cursor key (F1)

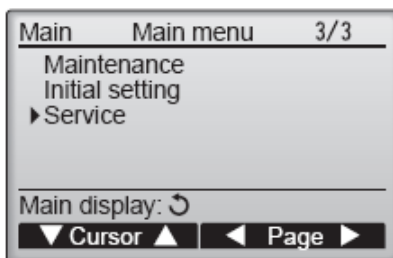

4. Enter Maintenance password default 9999 using (F1, F2, F3, F4 keys)
5. Press  key to acknowledge.
6. Select **Function setting** using (F1 and F2) Keys

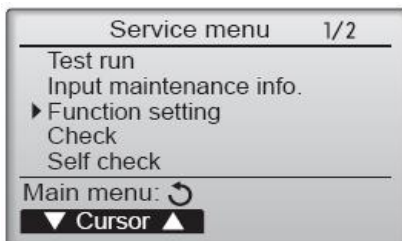

7. Press  key to acknowledge

WELLINGTON HEAD OFFICE

1 Parliament Street, Lower Hutt
PO Box 30772, Lower Hutt 5040
Phone (04) 560 9147 · Fax (04) 560 9133


AUCKLAND LOCAL OFFICE


Unit 1, 4 Walls Road, Penrose, Auckland
PO Box 12726, Penrose, Auckland 1642
Phone (09) 526 9347 · Fax (09) 526 9369


CHRISTCHURCH LOCAL OFFICE

44 Halwyn Drive, Hornby, Christchurch
PO Box 16904, Hornby, Christchurch 8441
Phone (03) 341 2837 · Fax (03) 341 2838

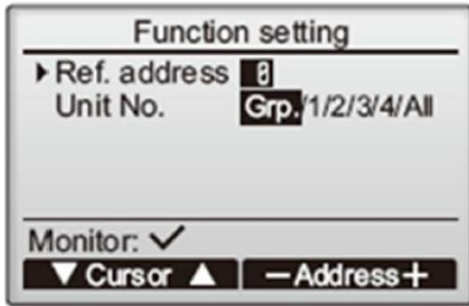


8. Select *Ref. address* of the unit to be changed (F1 and F2)
Select *Grp* for the refrigerant group using (F3 and F4)

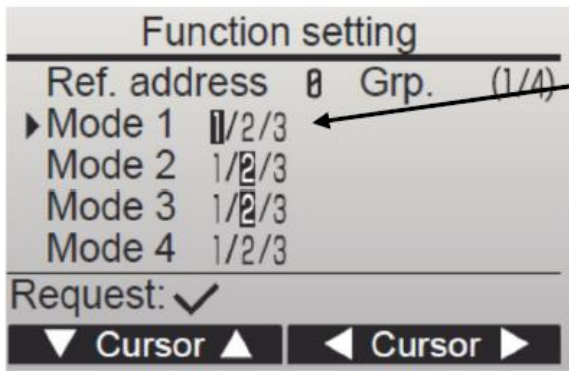


9. Press  key and the controller will collect data.
10. Select mode 2 using (F1 and F2)
11. Select option 3 using (F3 and F4)




Mode 2 Option 3 selects controller sensor

12. Press  key to acknowledge. Controller will send data to the indoor unit.
13. Press the return key  twice the display will say "exit function settings please wait"
14. To return to the home screen, keeping pressing the return key. 

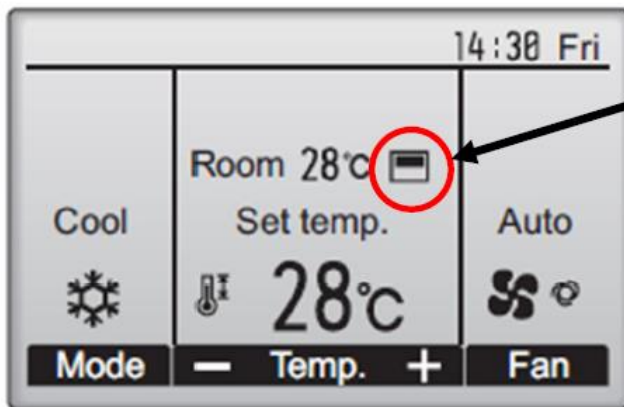

This symbol indicates that the unit is sensing room temperature from the wall controller.

This symbol will change to a  symbol if sensing from the unit sensor.