


## PEAD-RP(M)JAA - PEA-RP(M)GAA-WJA and SEZ-KD Static Pressure Matrix

### PAR-31(2)MAA


Static Pressure settings are different from model to model.  
To increase or decrease the static pressure follow the steps outlined below;

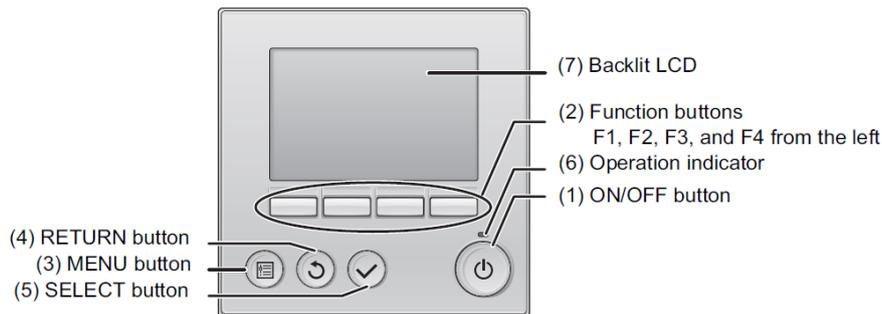

1. Turn the controller OFF. 

2. Select *Menu* using button. 


3. Select *Service* using the down cursor key (F1)

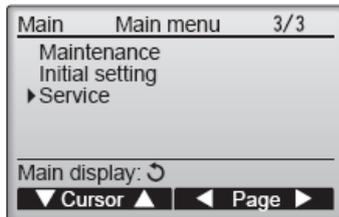

4. Enter Maintenance password default 9999 using (F1, F2, F3, F4 keys)

5. Press  key to acknowledge.

6. Select **Function setting** using (F1 and F2) Keys

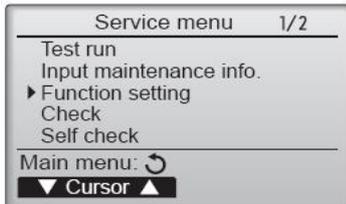

7. Press  key to acknowledge

8. Select *Ref. address* of the unit to be changed (F1 and F2)  
Select *All* for the refrigerant group using (F3 and F4)

#### WELLINGTON HEAD OFFICE


1 Parliament Street, Lower Hutt  
PO Box 30772, Lower Hutt 5040  
Phone (04) 560 9147 · Fax (04) 560 9133

#### AUCKLAND LOCAL OFFICE


Unit 1, 4 Walls Road, Penrose, Auckland  
PO Box 12726, Penrose, Auckland 1642  
Phone (09) 526 9347 · Fax (09) 526 9369

#### CHRISTCHURCH LOCAL OFFICE

44 Halwyn Drive, Hornby, Christchurch  
PO Box 16904, Hornby, Christchurch 8441  
Phone (03) 341 2837 · Fax (03) 341 2838

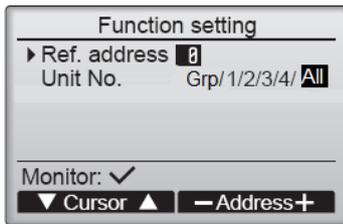

9. Press  key and the controller will collect data.
10. Select Mode 08 and 10 using (F1 and F2) keys
11. Select the Static pressure according to model listed in the table below. (F3 and F4) keys

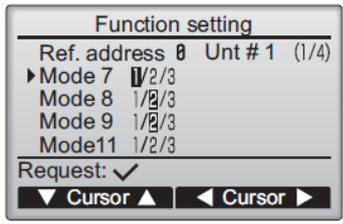

### Static Pressure settings for applicable units below

#### PEA-RP(M)100-140GAA

External static pressure	Setting no. of mode no. 08	Setting no. of mode no. 10
50 Pa (before shipment)	1	1
100 Pa	2	1
150 Pa	3	1

#### PEAD- RP(M)71-140JAA

External static pressure	Setting no. of mode no. 08	Setting no. of mode no. 10
35 Pa	2	1
50 Pa (before shipment)	3	1
70 Pa	1	2
100 Pa	2	2
125 Pa	3	2

#### PEA-RP140-200WJA

External static pressure	Setting no. of mode no. 08	Setting no. of mode no. 10
60 Pa	1	2
75 Pa	2	2
100 Pa	3	2
150 Pa (before shipment)	1	1

#### SEZ-KD-VAQ

External static pressure	Setting no. of mode no. 08	Setting no. of mode no. 10
5 Pa	1	2
15 Pa (before shipment)	1	1
35 Pa	2	1
50 Pa	3	1



1. Press  key to acknowledge. Controller will send data to the indoor unit.
2. Press the return key  twice the display will say "exit function settings please wait"
3. To return to the home screen, keeping pressing the return key. 