





# PAR31MAA Change Fan Static Pressure PEAD Ducted

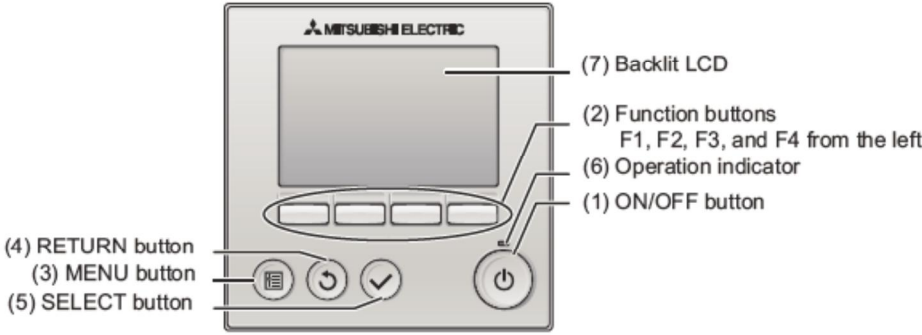


1. Turn controller off using Button 

2. Select Menu using Button 

3. Select Service menu using down cursor key (F1)

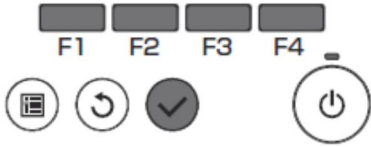

4. Enter maintenance password default 9999 using (F1,F2,F3,F4 keys)

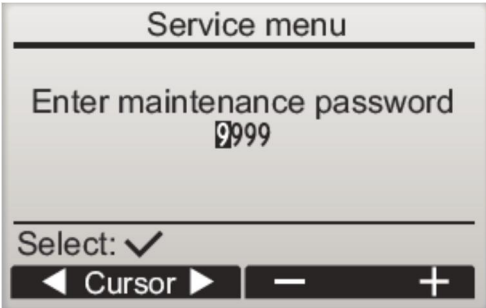


WELLINGTON HEAD OFFICE  
1 Parliament Street, Lower Hutt  
PO Box 30772, Lower Hutt 5040  
Phone (04) 560 9147 · Fax (04) 560 9133

AUCKLAND LOCAL OFFICE  
Unit 1, 4 Walls Road, Penrose, Auckland  
PO Box 12726, Penrose, Auckland 1642  
Phone (09) 526 9347 · Fax (09) 526 9369

CHRISTCHURCH LOCAL OFFICE  
44 Halwyn Drive, Hornby, Christchurch  
PO Box 16904, Hornby, Christchurch 8441  
Phone (03) 341 2837 · Fax (03) 341 2838




5. Press key to acknowledge.
6. Select Function Setting using F1/F2 cursor keys
7. Select "0" for Refrigerant Address of unit to be changed (F1 and F2). (Different if group controlled)

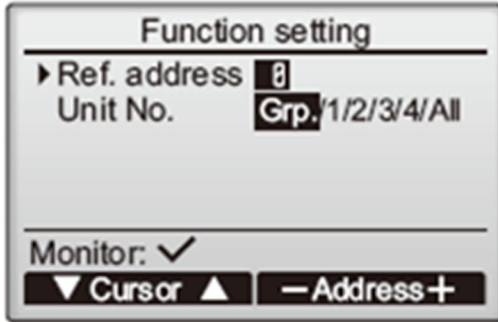

8. Select "All" for Unit Number using F1 to F4 keys (F3 and F4)




9. Press key and controller will collect data.
10. Select **Mode 8** with up/down keys (F1 and F2)

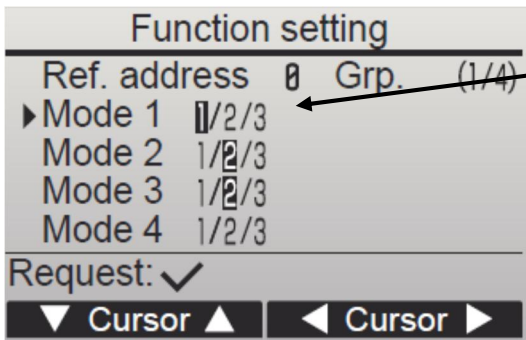

Mode **8** as per matrix below

11. Select **Option** 1,2 or 3 with side to side cursor keys (F3 and F4). As per Selection Matrix PEAD Fan Static Pressure table on Page 3.
12. Select **Mode 10** with up/down keys (F1 and F2)

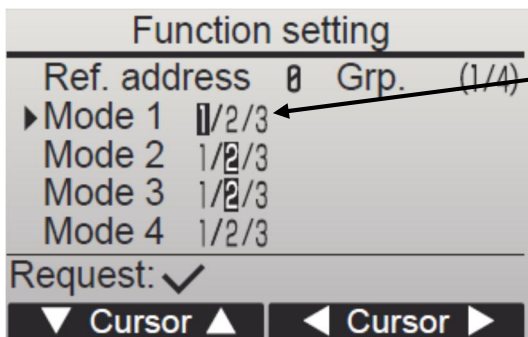

Mode **10** as per matrix below

13. Select **Option** 1 or 2 with side to side cursor keys (F3 and F4). As per Selection Matrix PEAD Fan Static Pressure table on Page 3.



14. Press Select Button and controller will send settings to the indoor unit.



15. Exit Function Setting mode with key.



16. Return to normal controller mode with key.

**Selection Matrix PEAD Fan Static Pressure**

Fan Static Selection	Mode 8	Mode 10
35	2	1
50	3	1
70	1	2
100	2	2
125	3	2